 




KETTLE

user's guide

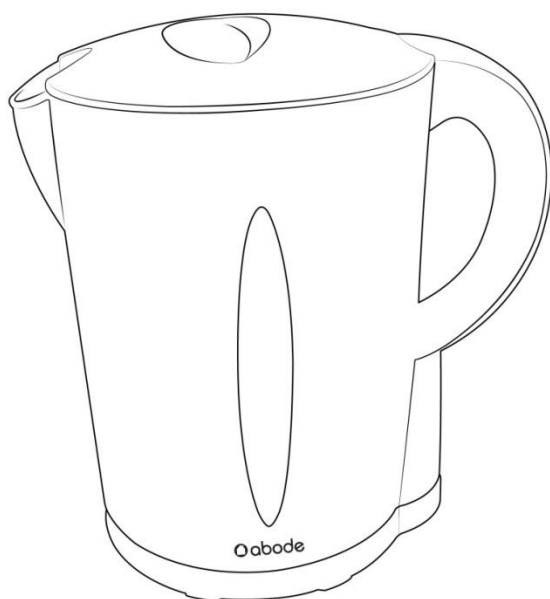

**Model No: WK8312BY-G, WK8312BY-P,
WK8312BY-R**

For Customer Services & Spare Parts please call **0845 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

**IMPORTANT: RETAIN FOR FUTURE
REFERENCE**

Contents

	Page
Safety instructions	3
Kettle overview	6
Using your kettle	7
Cleaning and Care	9
Connection to the mains supply	10
Guarantee	12
Customer support	13

For Customer Services & Spare Parts please call **0845 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

Safety instructions

IMPORTANT SAFETY INSTRUCTIONS **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.

This product is intended for household use only. Do not use outdoors. This product is only intended for boiling water.

WARNING: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.

WARNING: To protect against electrical shock do not immerse the cord, plug, appliance, or base in water or other liquid.

Avoid contact with steam from the spout when boiling water or just after it has switched off. Do not open the lid while the water is boiling. Care should be taken when opening the lid for refilling.

Never overfill the kettle. If overfilled, boiling water may be ejected from the spout. Always take care to pour the boiling water slowly and carefully without tipping the kettle too fast

Do not remove the lid while the water is boiling

Safety instructions

This appliance is not intended to be used in applications such as;

- **Staff kitchen areas in shops, offices and other working environments.**
- **Farmhouses.**
- **By clients in hotels, motels and other residential type environments.**
- **Bed and breakfast type environments.**

Never remove parts from the appliance such as the feet, screws and so on.

Only use the accessories supplied by the manufacturer.

Do not operate this appliance for anything other than its intended use.

This appliance or stand must not be immersed in water.

Only use the power base provided

For Customer Services & Spare Parts please call 0845 209 7461

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at www.productcareuk.com

Safety instructions

Do not touch hot surfaces. Always use handles or the switch.

Unplug from outlet when not in use and before cleaning. Allow to fully cool before cleaning.

Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

The use of accessory attachments are not recommended by the appliance manufacturer and may cause fire, electric shock or injury.

 
Do not let the cord hang over the edge of the worktop, or touch the hot surfaces.

Never put any objects into the openings on the outer case.

For Customer Services & Spare Parts please call **0845 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at **www.productcareuk.com**

Kettle overview

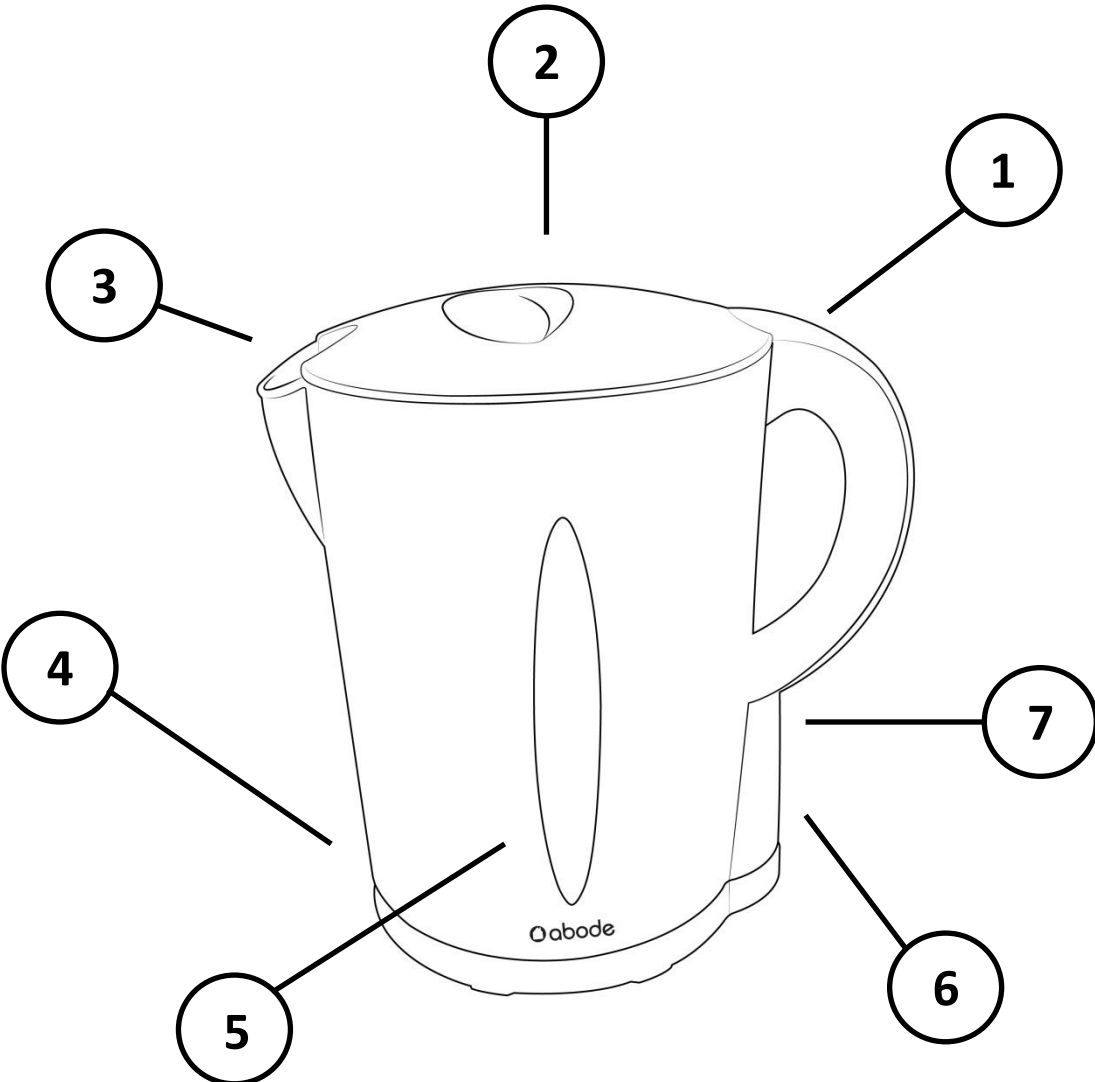

- | | | | |
|---|---------------|---|---------------------|
| 1 | Handle | 5 | Water level window |
| 2 | lid | 6 | On/Off switch |
| 3 | Spout | 7 | On/Off illumination |
| 4 | Cordless base | | |

Using your kettle

Before you use your kettle

1. Remove all the packaging and ensure none has been left inside.
2. Check the kettle after unpacking for any visual damage such as:
 - Misaligned or damaged parts
 - Damage to the base assembly
 - Damage to the plug or cable
 - If you can see any damage **do not use the kettle**
3. Check that the filter is located correctly below the spout, to ensure it hasn't become loose during transit or storage.

This kettle must be put on a stable horizontal surface, away from walls and cabinets.

The kettle must be placed away from high temperatures and steam.

Do not install the kettle over, on, or near a cooker or other heat producing appliance, or in a heated oven.

To prevent damage to the heating element, do not operate without water.

For Customer Services & Spare Parts please call **0845 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

Using your kettle

It is recommended that you boil the kettle several times following the below instructions and discard the water before first use. This will remove any loose dust or materials that may have remained from the manufacturing process.

Open the lid and fill with water. Fill to the required level and close the lid. We recommend you fill to the maximum line for first use and discard the water as suggested above.

Always fill the kettle between the MIN and MAX lines. If you fill below the MIN line the kettle may run dry and you may damage the heating element. Do not fill below the MIN line.

If the kettle runs dry the safety cut-out will operate and the power will be removed from the element to prevent possible damage. To reset, allow the kettle to cool down or carefully add water. If you fill above the MAX line, then boiling water may be ejected from the spout. Do not fill above the MAX line.

Insert the mains plug into a suitable 13 Amp mains socket.

Press the power switch to the ON position 'I'. The kettle switch will illuminate. When the water has boiled the kettle will switch off automatically. Avoid lifting the kettle from the base when it's boiling.

For Customer Services & Spare Parts please call **0845 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at **www.productcareuk.com**

Cleaning and care

WARNING: Electrical Shock Hazard.

Before you clean the appliance, disconnect the mains plug from the wall socket.

Do not immerse cord, plug or appliance in any liquid or allow moisture to come into contact with electrical parts.

Allow the kettle to cool off before cleaning.

Clean the outer surface using a moist cloth and wipe over with a dry, soft cloth.

Do not use harsh detergents, abrasives or spray on cleaners.

Don't allow water to seep into the openings or come into contact with electrical connection.

To prevent scale build up on the element, descale your kettle regularly with a de-scaler readily available from most super markets and stores.

For Customer Services & Spare Parts please call **0845 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at **www.productcareuk.com**

Connection to the mains supply

WARNING- THIS APPLIANCE MUST BE EARTHED

This appliance is designed to operate from a mains supply of AC220V-240V ~50HZ.

Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a 13A plug complying with BS1363.

If this plug is unsuitable or needs to be replaced, please note the following:

Important: The wires in the mains lead are coloured in accordance with the following code:

GREEN/YELLOW-EARTH

BLUE-NEUTRAL

BROWN-LIVE



DANGER
Electric
Shock Risk

For Customer Services & Spare Parts please call **0845 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at **www.productcareuk.com**

Connection to the mains supply

For UK use only – Plug fitting details (where applicable):

 
As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which is marked with the letter E or by the earth symbol or coloured GREEN or GREEN/YELLOW.

The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK. The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

Always ensure that the plug cord grip is fastened correctly.

If a 13A (BS1363) fused plug is used it must be fitted with a 13amp fuse conforming to BS1362 and be BSI or ASTA approved.

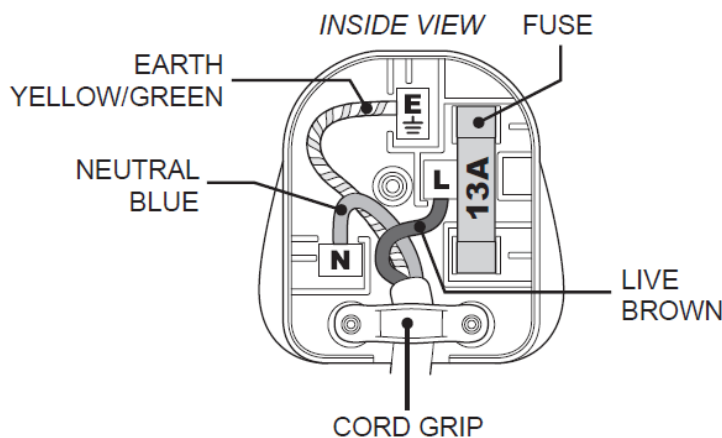

Rated voltage: AC 220V - 240V ~ 50/60Hz

Power consumption: 1850 - 2200W

Guarantee

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which has been supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

For Customer Services & Spare Parts please call **0845 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at **www.productcareuk.com**

Customer support

For Customer Services & Spare Parts
please call **0845 209 7461**
Opening times: Monday - Friday
8am – 6pm & Saturday 9am – 1pm or
visit us at **www.productcareuk.com**

Produced for;
Asda stores Ltd.
Leeds
LS11 5AD

Disposal information



This symbol is known as the 'Crossed-out wheellie bin Symbol'.
When this symbol is marked on a product/batteries, it means that
the product/batteries should not be disposed of with your general
household waste. Only discard electrical/electronic/battery items
in separate collection schemes, which cater for the recovery and
recycling of materials contained within. Your co-operation is vital to
make sure the success of these schemes and for the protection of
the environment. For your nearest disposal facility, visit
www.recycle-more.co.uk or ask in store for details.

We reserve the right due to possible changes to design to alter the
instruction manual without prior notice.





Product name: WK8312BY-G, WK8312BY-P, WK8312BY-R

Site code: 15A.10.13.201, 15A.10.13.202, 15A.10.13.220

Revision 2